



# ON DEMAND - TRON USER MANUAL.



1 Coffee  
\_Reduction of the grinding time  
\_Menu selection




2 Coffees  
\_Increase of the grinding time  
\_Menu selection



\_Continuous coffee  
\_Screen selection



\_Chronometer  
\_Access to the menu

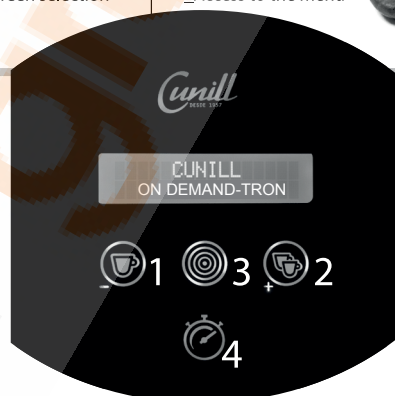

## START-UP OF THE GRINDER:

Connect the grinder to the network and turn it on by pressing the main switch.

**LANGUAGE SELECTION:** To access the language selection press button No. 4 twice and then press simultaneously button No. 1 and No. 2 during 4 seconds.

(LANGUAGE) (1 - BEAT - 1 COFFEE) (2-BEATS - 2 COFFEES) (COUNTER)

To select the language press buttons No. 1 or No. 2 until the desired language appears.

Once selected it needs no confirmation.

**1 COFFEE:** Press button No. 1 to get one dose of ground coffee.

**2 COFFEES:** Press button No. 2 to get two doses of ground coffee.

**CONTINUOUS COFFEE:** To get a customized ground coffee dose keep pressed button No. 3 until obtain the desired quantity

**PROGRAMMING COFFEE:** To access the programming of the grinding time for 1 or 2 coffees press button No. 4 twice and then simultaneously press button No. 1 and No. 2 for 4 seconds. Pressing button No. 3 see on the display the desired section:

(LANGUAGE) (1-BEAT - 1 COFFEE) or (2-BEATS - 2 COFFEES) (COUNTER).

To increase or decrease the grinding time press button No. 1 (to decrease) or No. 2 (to increase).

Once selected it needs no confirmation.

**COFFEE COUNTER:** To access the programming of the coffee counter press button No. 4 twice and then simultaneously button No. 1 and No. 2 during 4 seconds.

Pressing button No. 3 select the desired section visualized on the display:

(LANGUAGE) (1 - BEAT - 1 COFFEE) (2-BEATS - 2 COFFEES) (COUNTER)

See on the screen the whole quantity of coffees made.

Pressing buttons No. 1 and No. 2 at the same time the counter will be set to zero.




## GRINDING SETTING ACCORDING TO THE COFFEE MACHINE USED

**To make a perfect espresso:** Press button No. 4 of the coffee grinder with one hand while pressing at the same time the button for coffee on the coffee machine. Release immediately button No. 4.

Once the coffee is made press again button No. 4 to stop the chronometer and see on the display the seconds it took to make one coffee.

According the table below the calibration will be modified.

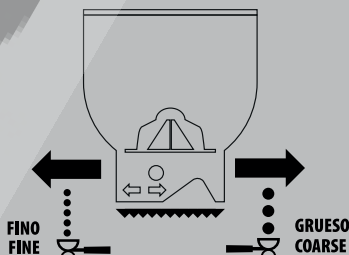

15" to 20" (very coarse grinding) WRONG COFFEE  
20" to 25" (fine grinding) WRIGHT COFFEE  
25" to 30" (very fine grinding) WRONG COFFEE