



ELECTRONIC BOARD REPLACEMENT

- 1- Turn off power to dishwasher
- 2- Disconnect the cables from the damaged board
- 3- Remove the "HOUSING" connector from the damaged board

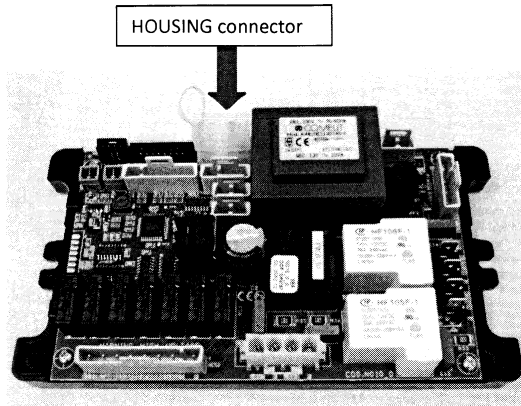

- 4- Reconnect the new board (by paying attention not to reverse the temperature probes)
- 5- Connect the "HOUSING" connector to the new board
- 6- When the board will be turned on, a code insertion will be asked

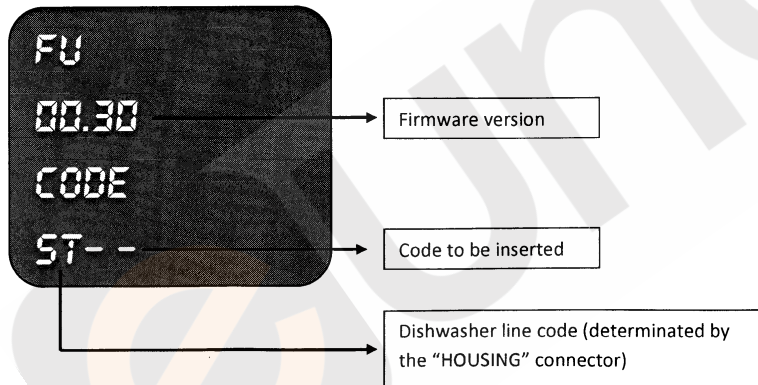




7- In order to insert the code check the following table :

Connector	Line	Code which appears on DISPLAY
	STANDARD	ST
	BUILT-IN WATER SOFTENER	AD
	BREAK-TANK	BT
	WATER CHANGE	EC
	FULL	FL

Code to be inserted according to the dishwasher model :

Dishwasher typology	Code to be selected
GLASSWASHER Basket 35x35 and 40x40	10
GLASSWASHER CLEAN WATER Basket 40x40	15
FRONT-LOADING DISHWASHER Basket 45x45, 50x50, 50x60	20
WAREWASHER Basket 60x67	30
HOOD TYPE DISHWASHER	40

The code will be inserted manually on occasion of the first switch on by selecting the arrows  

and confirming by keeping pushed the ON/OFF push-button 

- 8- **Important: if the dishwasher has the drain pump installed, you must reactivate it (item no. 26 in the technical menu).**