

VÁLVULA EUROSIT SERIE 630 / 630 SERIES EUROSIT VALVE

FUNCIONAMIENTO

ENCENDIDO DE LA LLAMA PILOTO

Partiendo de la posición "OFF" ● (fig.1) presione y gire el mando hasta la posición de piloto. ✱.

Presione el mando y encienda la llama del piloto, manteniendo el mando presionado durante algunos segundos. (fig.2).

Suelte el mando y compruebe que la llama del piloto sigue encendida (fig.3).

Si se apaga, repita la operación de encendido.

SELECCIÓN DE TEMPERATURA

Gire el mando hasta la posición de temperatura deseada (fig.4)

POSICIÓN DE STAND-BY

Para mantener el quemador principal apagado y la llama del piloto encendida, gire el mando a la posición de piloto ✱ desde la posición correspondiente a la temperatura seleccionada.

APAGADO

Presione y gire el mando a la posición "OFF" ●.

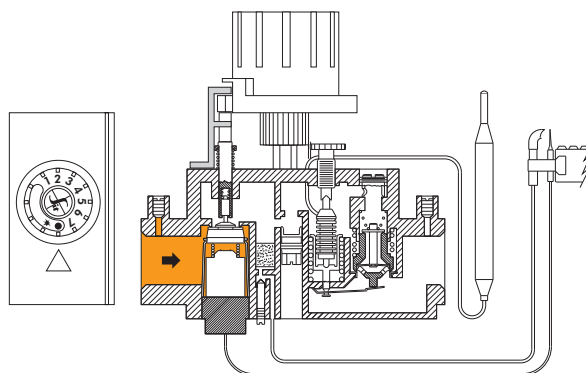


FIG. 1

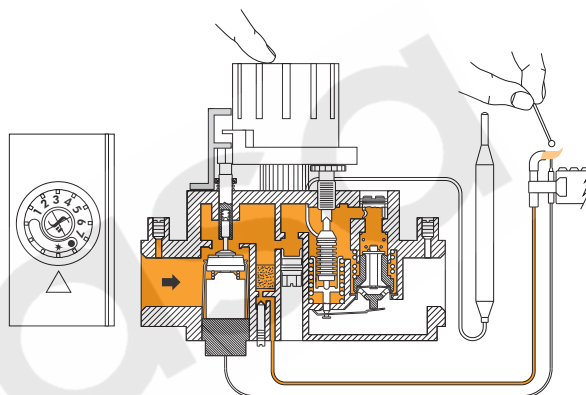


FIG. 2

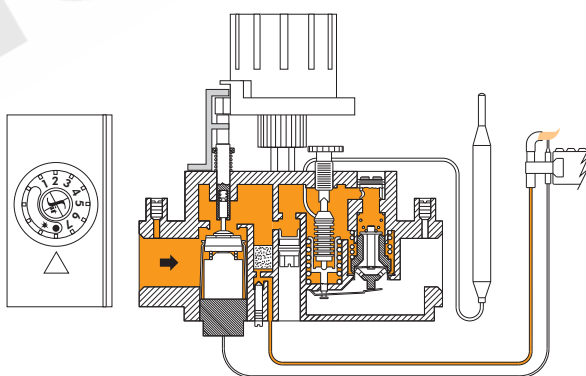


FIG. 3

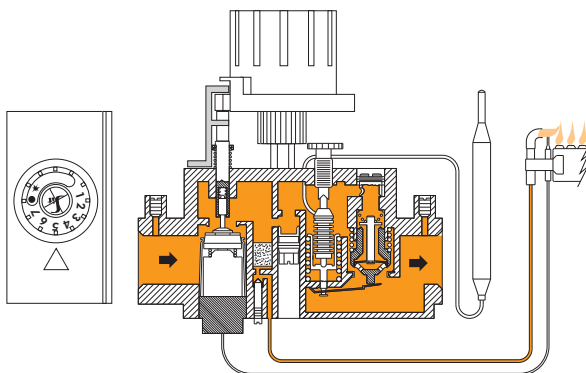


FIG. 4

OPERATION

LIGHTING THE PILOT FLAME

Starting from the OFF position ● (fig.1) press and turn the knob to the pilot position ✱.

Press the knob and light the pilot flame, keeping the knob pressed for a few seconds (fig.2).

Release the knob and check that the pilot flame continues to burn (fig.3).

If the flame extinguishes, repeat the lighting operation.

TEMPERATURE SELECTION

Turn the knob to the position corresponding to the desired temperature (fig.4)

STAND-BY POSITION

To keep the main burner off and the pilot flame on, turn the knob to the pilot position ✱ from the position corresponding to the selected temperature.

TURNING OFF

Press and turn the knob to the OFF position ●.