


Conversion instructions for float switch *fusionchef Pearl*

Required Tools and Material:

Extended drill, \varnothing 10.2 mm	
 approx. 290 mm [11.5 inch]	

Float switch Pearl	
	

Reconstruction at Pearl



1. Remove the hood.

2. Remove the switch wheel.




3. Cut-off the connecting wires, remove the float and the conduit.

4. Put the unit sideways. Rebore the mounting plate with the extended drill (\varnothing 10,2 mm).




5. Debure the hole. Carefully remove shavings (blow out).

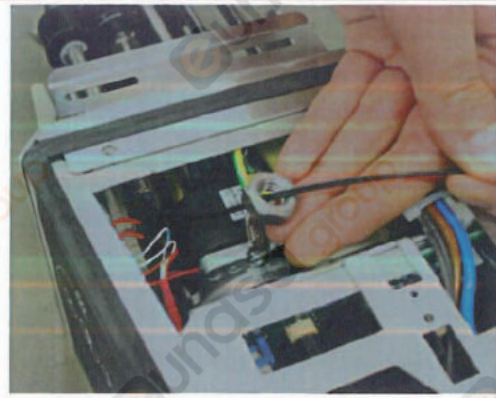


6. Insert the new float and thread in the lock nut.



7. Lock the float switch (tightening torque 2 Nm) and secure with Loctite No. 274.

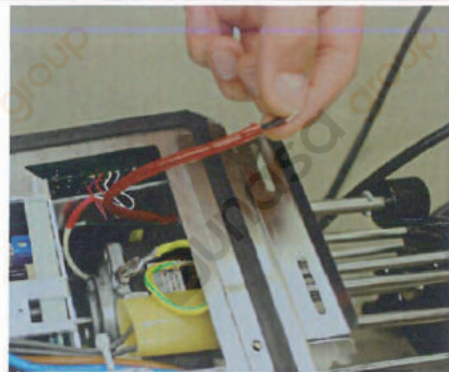

8. Insulate the connection wires.

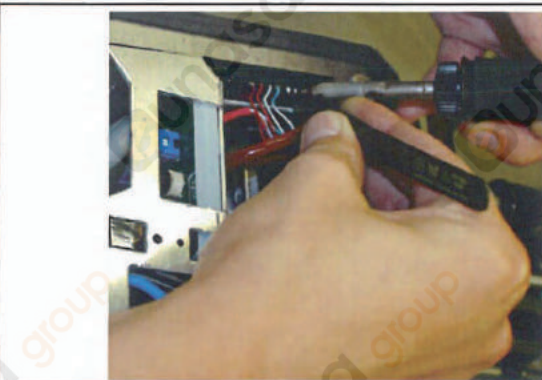

9. Solder the connection wires.



10. Reassemble the unit in reverse order.

Pearl - Wiring diagram

