



Modification Instruction 3040.3100ET Level PCB CD / CCD

The pcb 3040.3100ET replaces the following spare part numbers:


3002.0400, 3002.0408, 3040.2060, 3040.2061

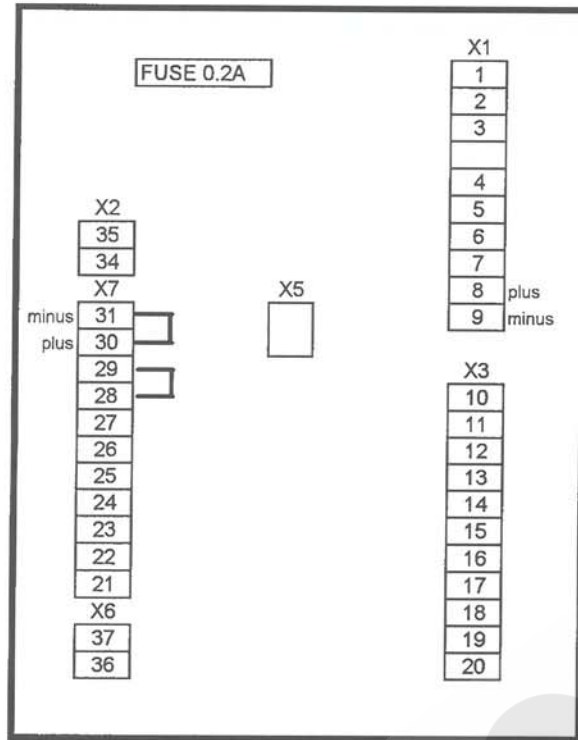

CD6 - CD20 up to 9512
CM6 - CM20 up to 9104

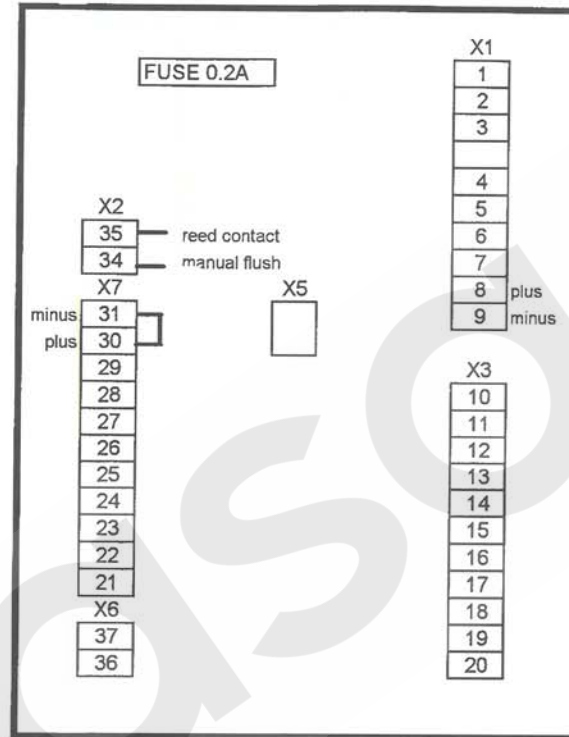

CD6 - CD20 from 9601 - 9705
CCD61 - CCD202

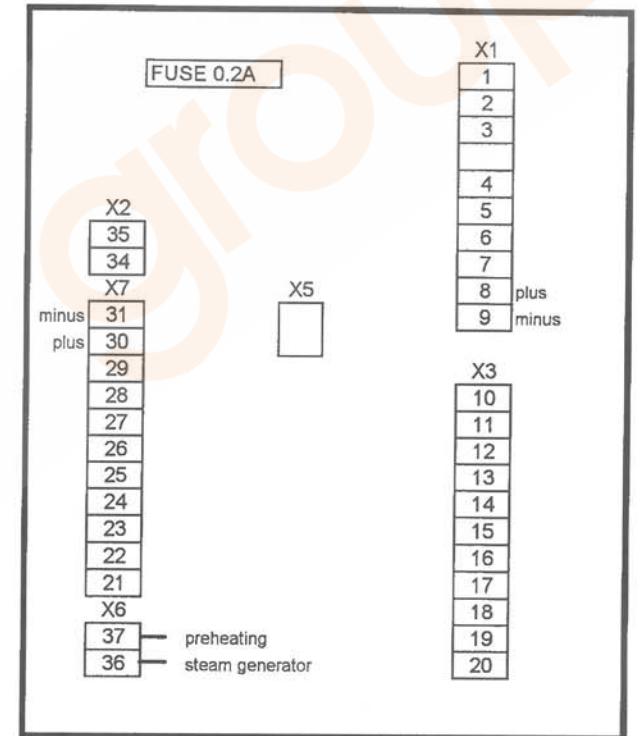

CD6 - CD202 from 9706 only

Please observe Thermocouple polarity:

Colour Code green / white:	green - plus white - minus
Colour Code red / green	red - plus green - minus

Please note: With jumper X5 in place, the SC pump will operate continuously
With jumper X5 removed, the SC pump will operate in a pulsing mode